

Verzio Skii

2.0 Duo SIM

USER MANUAL

TABLE OF CONTENTS

About the User Manual	7
Safety Precautions and Proper Use	8
Safety Precautions	8
Proper Use and Care	9
SAR Statement	14
Getting Started	15
What's in the Box?	15
Phone Layout	15
Keypad Functions	16
SIM Card Slots	20
Inserting the SIM Card and Battery	20
Charging the Battery	22
<i>Battery Performance</i>	22
Inserting the Memory Card.....	22
Switching your Phone On and Off	23
Idle Mode	23
Using the Stylus	24
Touch Screen.....	24
<i>Slide lock</i>	24
<i>Plug-in Toolbar</i>	25
Main Menu	26
Dual SIM Mode	26

Phone Calls	27
Making a Voice Call.....	27
Making International Calls	27
Answering and Rejecting a Call	27
Calling a Contact from your Phonebook.....	28
Making a Call from Call History	28
Using Speed Dial	28
In-call Options	29
Making Multiple Calls	30
<i>Making a Second Call.....</i>	<i>30</i>
<i>Call Waiting.....</i>	<i>30</i>
<i>Conference Call.....</i>	<i>30</i>
Blocking Unwanted Calls.....	31
Messages	32
Text Messages (SMS).....	32
<i>Creating and Sending a Text Message</i>	<i>32</i>
<i>Entering Text</i>	<i>33</i>
Multimedia Messages (MMS).....	34
<i>Creating and Sending MMS.....</i>	<i>34</i>
<i>Reading and Replying to a Message.....</i>	<i>35</i>
SMS Settings	35
MMS Settings	36
Chat Messaging	38
Contacts.....	39

Adding a New Contact.....	39
<i>From Idle Mode</i>	39
<i>From Call History</i>	39
<i>From SMS or MMS</i>	39
Searching for a Contact.....	40
Contact Options	40
Copying a Contact.....	40
Copying All Contacts.....	41
Personalizing your Contacts.....	41
Sending your Business Card.....	41
Creating a Caller Group	42
Profiles	43
Settings	45
Dual SIM Settings	45
Pen Calibration.....	45
Phone Setting.....	45
<i>Time and date</i>	45
<i>Schedule power on/off</i>	45
<i>Language</i>	45
<i>Preferred input method</i>	45
<i>Display idle mode menu</i>	46
<i>Phone style settings</i>	46
<i>Greeting text</i>	46
<i>Dedicated key</i>	46
<i>Auto update of date and time</i>	46

<i>Handwriting</i>	46
<i>LCD backlight</i>	47
Network Setting	47
<i>SIM selection</i>	47
<i>Network selection</i>	47
<i>Preferred networks</i>	47
Security Setting	47
<i>Locking the keypad</i>	47
<i>SIM-1 or SIM-2 security settings</i>	48
<i>Phone lock</i>	48
<i>Auto keypad lock</i>	49
<i>Change password</i>	49
Restore Setting	49
Sound Effect.....	49
Themes	49
Organizer	50
Calendar.....	50
To Do	50
Alarm.....	50
World Clock.....	51
Extra	52
Calculator	52
Unit Converter	52
Currency Converter	53
Health.....	53

<i>Body Mass Index (BMI)</i>	53
<i>Menstrual Cycle</i>	53
Stopwatch	54
<i>Split timing</i>	54
<i>Lap timing</i>	54
E-book	55
<i>Reading an e-book</i>	55
Bluetooth	55
<i>Activating Bluetooth</i>	56
<i>Pairing with other devices</i>	56
<i>Sending data via Bluetooth connection</i>	57
<i>Receiving data via Bluetooth connection</i>	57
Connecting to the PC	57
<i>Transferring data</i>	58
<i>Webcam</i>	58
Media	59
Camera	59
<i>Sending a Picture via MMS</i>	59
<i>Camera settings</i>	60
Image viewer	60
Video recorder	61
Video player	61
Audio player	62
<i>Playback controls</i>	62
Sound recorder	62

<i>Sound recorder settings</i>	63
<i>Recording sound</i>	63
<i>Recording an active call</i>	63
<i>Listening to a sound clip</i>	64
Services	65
SIM Toolkit [STK]	65
Using Browser Profiles	65
<i>Connecting to the Internet</i>	66
Using Data Accounts.....	66
Menu Map	67
Settings Menu	69
Technical Specifications	70
Limited Warranty	71

About the User Manual

The information contained in this User Manual is written for the Verzio Skii Duo SIM mobile phone. Verzio reserves the right to make changes and improvements to the product and any of the features described in this document without prior notice.

The following symbols are used to represent an action when operating the phone.

Symbol		Function
→	Right arrow	Followed by – the order of menu options you must select in order to perform a command or activate a setting.
[]	Square brackets	Phone key - For example, power key or numeric key
< >	Angle brackets	Command or Menu Option that appears directly above a soft key

Safety Precautions and Proper Use

You should follow the guidelines given in this manual for the safe and efficient use of your phone. Failure to observe these guidelines and requirements may void your warranty and may invalidate any approvals given to the phone.

Safety Precautions

Drive Safely

- Do not use your phone while driving.
- Give your full attention to driving. If using your phone cannot be avoided, pull over and park the vehicle in a safe location first.
- Always obey local laws and regulations regarding the use of a cellular phone in areas where you drive.

Vehicle

- Do not place your phone or any accessories in the area over an airbag or in the airbag's deployment area. An airbag inflates with great force, and serious injury could occur.
- The fitting of any accessories to a vehicle should only be undertaken by a suitably qualified person to ensure that vehicle systems are not adversely affected, and that the accessory gives optimum performance.

RF Interference

- Do not switch on your phone aboard an aircraft as it may interfere with the aircraft's navigational equipment.
- Do not switch on your phone in a hospital, except in designated areas.
- For body worn operation, this phone has been tested and meets RF exposure guidelines when used with an accessory

that contains no metal and that positions the handset a minimum of 15mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

- Use of your phone's function may affect the performance of medical electronic units (pacemakers, hearing aids, etc.). The phone should be kept at least 6 inches (15.24 cm) from a pacemaker anytime the phone is switched on.

Potentially Explosive Environments

- Do not switch on your phone near gas or flammable substances.
- Observe the rules concerning the use of mobile phones at gasoline stations, chemical plants and at all sites where a risk of explosion exists.

Proper Use and Care

Phone Operation

- When placing or receiving a phone call, hold your phone as you would a landline phone.
- When sending text messages or playing games on your phone, hold the phone with a relaxed grip and press the keys lightly.
- Use special features and shortcuts that reduce the number of keys you have to press.

Phone Care and Maintenance

- Keep your phone and all its parts and accessories out of small children's reach.
- Keep it dry.
- Do not use or store it in dusty or dirty areas.
- Do not attempt to disassemble the phone.

- Do not drop, throw or shake the phone.
- Do not use soaps, chemicals, cleaning solvents, or strong detergents to clean it. Use a moist cloth to wipe it.
- Avoid exposing your phone to any severe shocks, extreme (hot or cold) temperatures or moisture.
- Keep your phone away from open flames such as lit candles or cigarettes
- If the phone, battery, or any accessory is not working properly, take it to your nearest authorized service center. Back up or delete all data before taking your phone to a service center as maintenance or recovery of data is not guaranteed.

Internal Antenna

- Do not use your phone if the antenna is damaged.
- Replace the antenna only with one approved by Verzio. Unapproved antennas or modifications may damage your phone, degrade its performance and violate local regulations.
- Do not touch or cover the antenna area unnecessarily while a call is in progress as it may interfere with reception. Contact with the antenna affects call quality and may cause your phone to transmit at a higher power level than otherwise needed.

Approved Accessories

Use only batteries, chargers and accessories approved by Verzio for use with this phone model. The use of any other types may invalidate any warranty applying to the phone, and may be dangerous.

Battery

- Network configuration and phone usage will affect talk-time and standby time. Using the games or camera will hasten battery consumption.
- When the battery charging alert is displayed on the screen, charge the battery as soon as possible. If you continue using your phone ignoring the alert, the phone may cease to function, and all data and settings you have stored may be lost.
- Before removing the battery from the phone, make sure the phone is switched off.
- Replace and charge the new battery as soon as possible after removing an old one.
- Do not touch the battery terminals. Batteries can cause damage, injury or burns if a conductive material touches exposed terminals.
- When the battery is detached from the phone, use a cover made of non-conductive material for keeping and carrying the battery safely.
- Recommended temperature for using and storing batteries is approximately 20°C.
- The batteries' performance is limited in low temperatures, particularly below 0°C and the phone may not work temporarily regardless of the amount of remaining battery power.
- Exposing the phone to extreme temperatures will shorten battery life.
- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to replace it.

Charger

- The charger is compatible only with power sources indicated on its label. Do not connect the charger to a power source of a different voltage or frequency.
- Do not use the charger outdoors or in areas where it may become wet.
- Unplug the charger from the wall socket using the body of the charger, not the cord.
- Locate the cord so that it will not be tripped over, stepped on or damaged.
- Do not use the charger if it is damaged.
- Unplug the charger from the wall socket before cleaning it. Use a slightly damp cloth for cleaning, and allow the charger to dry fully before plugging it in.

Memory Card

- Do not remove or insert a memory card while data on the card is being edited. Do not turn off the phone or device containing the memory card while data on the card is being edited as this may damage the data or cause the card to stop functioning correctly.
- Data may be lost under the following circumstances.
 - If the phone is dropped, or shook, or force is applied while the memory card is inserted.
 - When the phone is used in areas that are exposed to static electricity or electric noise.
- Backup your important data in case data on the memory cards are lost due to malfunctions.
- Do not touch the metal terminals with your hands or metal objects.

Disposal

Your battery and other components may require precautions to be taken for safe disposal. The battery type is indicated on the battery label. Please follow all local and/or governmental laws and regulations when disposing of your phone or battery.

Repetitive Motion Injuries

- Long periods of repetitive hand motions, incorrect body posture, and poor work habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. To reduce the risk of such injuries, follow these precautions when using this device:
- Take frequent short breaks.
- Keep your wrists straight.
- Keep your wrists and shoulders relaxed.
- Avoid supporting your wrists on sharp edges.
- Be alert to signs of discomfort. If you feel pain, numbness, tingling, weakness, swelling, burning, cramping, or stiffness in your hands, wrists, arms, shoulders, neck, or back, see a qualified health professional.

Emergency Calls

- Emergency calls may not be able to be made on all mobile phone networks when certain network services and/or phone features are in use. Contact your service provider for more information.
- The emergency number can normally be used to make an emergency call in any country, with or without a SIM card inserted if a GSM network is within range.

SAR Statement

This mobile phone meets requirements for exposure to radio frequency energy.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by international guidelines is 2.0 Watts/kg*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest operating power level. Although the SAR is determined at the highest operating power level, the actual SAR of the phone while operating normally can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to communicate with the network. In general, the closer you are to a base station, the lower the power output of the phone.

The highest SAR value for the phone when tested for use at the ear is 0.519 W/kg. Always read and follow the operating and safety instructions that came with your phone.

The SAR limit for mobile phones used by the public is 2.0 Watts/Kg (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.


Getting Started

What's in the Box?

Please check if your package comes with the following items. If any item is missing or damaged, please contact your retailer.

- Handset
- Li-ion battery (2 pcs)
- Travel charger
- Stereo headset
- USB cable
- User manual
- Warranty card

Phone Layout

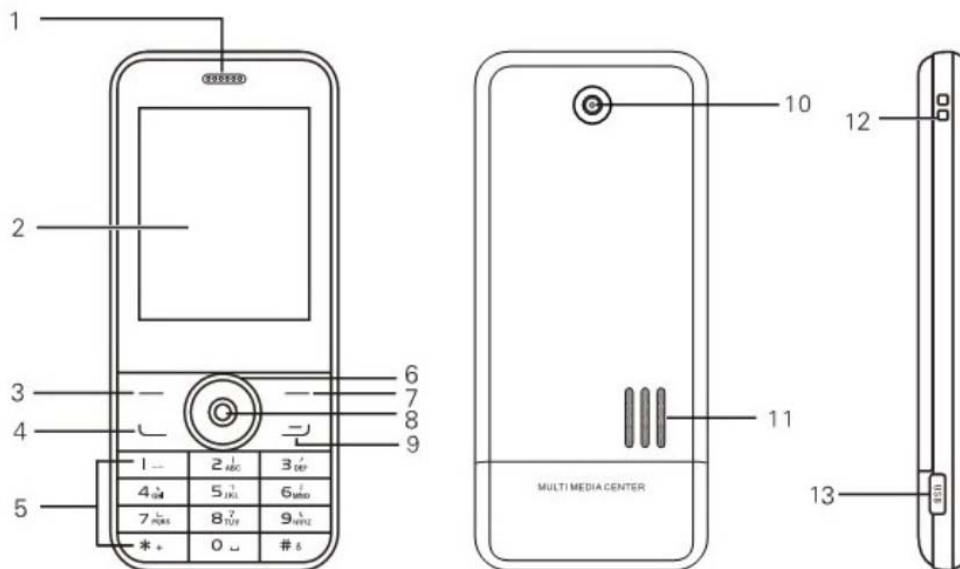

- | | | |
|-----------------------------------|--------------------------------|---------------------|
| 1 – Earpiece | 5 – Keypad | 9 – END key |
| 2 – Main Display | 6 – Four way
Navigation key | 10 – Camera |
| 3 – Left soft key /
Call key 2 | 7 – Right soft key | 11 – Loudspeaker |
| 4 – ANSWER key /
Call Key 1 | 8 – OK key /
Main Menu key | 12 – Lanyard eyelet |
| | | 13 – microUSB port |

Keypad Functions

Key	Function
<p>Up Navigation key [▲]</p>	<p>Idle mode: Open the assigned function</p> <p>Menu mode: Move up to highlight an icon in the Main Menu, an option in a menu list, or a file name in a file list</p> <p>Call mode: Adjust the volume lower</p> <p>Text mode: Move the cursor one line up in a text field</p> <p>Camera mode: Zoom in on the subject</p> <p>Audio player mode: Set the volume higher</p>
<p>Down Navigation key [▼]</p>	<p>Idle mode: Open the assigned function</p> <p>Menu mode: Move down to highlight an icon in the Main Menu, an option in a menu list, or a file name in a file list</p> <p>Call mode: Adjust the volume lower</p> <p>Text mode: Move the cursor one line down in a text field</p> <p>Camera mode: Zoom out on the subject</p> <p>Audio player mode: Set the volume lower</p>

Left Navigation key



Idle mode: Open the assigned function

Menu mode:

- Move left to highlight an icon in the Main Menu
- Go back to the previous screen

Text mode: Move the cursor to the left in a text field

Camera mode: Increase the brightness level of the subject

Audio player mode: Move to the next music track

Right Navigation key



Idle mode: Open the assigned function

Menu mode: Move right to highlight an icon in the Main Menu

Text mode: Move the cursor to the right in a text field

Camera mode: Reduce the brightness level of the subject

Audio player mode: Move to the previous music track

OK key



Idle mode: Open the Main Menu

Menu mode: Start a function or command

Edit mode:

Accept newly entered information


Confirm any changes made on

	<p>current records</p> <p>Camera mode: Take a photo or start video recording</p> <p>Audio player mode: Start/Pause music playback</p>
ANSWER key / SIM-1 Call key	<p>Idle mode: Retrieve recently dialed, received and missed calls at SIM-1 and SIM-2</p> <p>Call mode:</p> <ul style="list-style-type: none"> • Answer an incoming call on SIM-1 or SIM-2 • Dial a call via SIM-1 <p>Audio player mode: Stop music playback</p>
END key / Power key	<p>Press and hold to turn the phone on or off</p> <p>Menu mode: Close an application and return to Idle mode</p> <p>Call mode: End a call</p>
Left soft key / SIM-2 Call key	<p>Idle mode: Create a new text message</p> <p>Call mode: Dial a call via SIM-2</p>
Right soft key	<p>Idle mode: Open the Phonebook</p> <p>Menu mode: Perform the function or command shown directly above the key</p> <p>Edit mode: Backspace then delete</p>

	<p>one or more characters in a text field</p> <p>Call mode: Activate the loudspeaker</p>
Alphanumeric keys	<p>Idle mode: Press and hold [1] to access Voice Mail</p> <p>Menu mode: Press [1-9] to:</p> <ul style="list-style-type: none"> • Highlight the corresponding icon in the Main Menu • Highlight the corresponding option in a menu list <p>Call mode:</p> <p>Press [0-9] to enter the phone number to dial</p> <p>Press and hold [2-9] to speed dial frequently called phone numbers</p>
Asterisk key [*]	<p>Idle mode: Enter * character</p> <p>Text mode: Open list of symbols</p> <p>Call mode:</p> <ul style="list-style-type: none"> • Press repeatedly to insert the international country code prefix '+' • Press repeatedly to insert a pause 'p' or a wait 'w' character into a phone number
Hash key [#]	<p>Idle mode:</p> <ul style="list-style-type: none"> • Enter # character • Press and hold to activate Silent profile

SIM Card Slots


The Verzio Skii supports two SIM cards. In the figure below, the SIM card slot at the bottom is designated as SIM-1 while the one on top is designated as SIM-2.

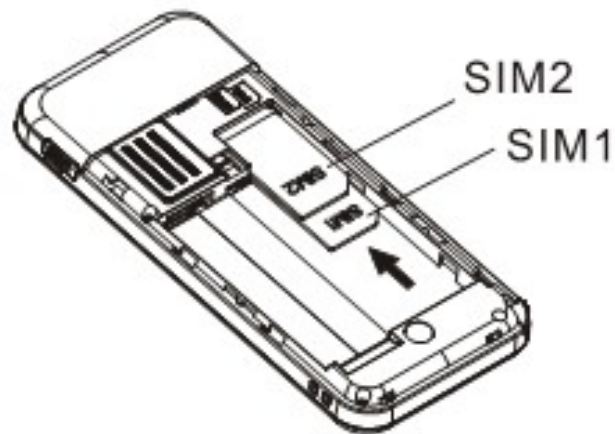


Inserting the SIM Card and Battery

Your Subscriber Identity Module, or SIM card, contains your phone number, phonebook/message memory, Personal Identification Number (PIN) and other optional network services.


1. Push up the battery cover and slide it out from the phone.

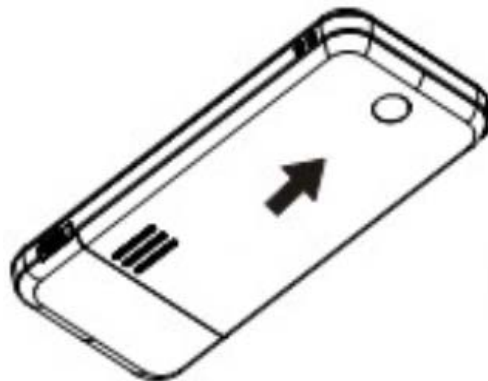


2. Insert the SIM cards with the gold plate facing down and following the placement guide found near the SIM card holders.

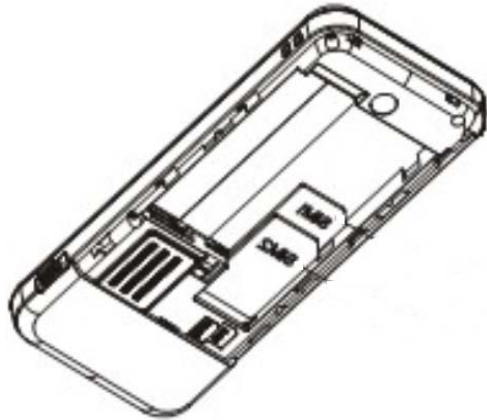

3. Insert the battery by aligning the metal contacts at the bottom of the battery compartment and then push down.

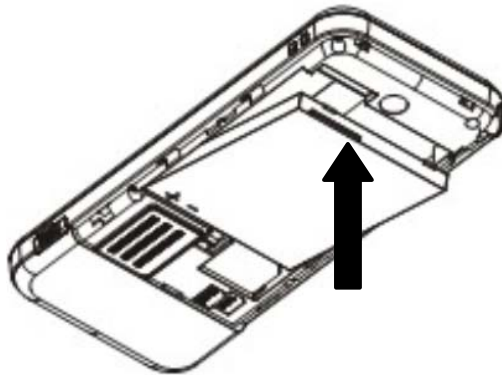

4. Place back the battery cover by sliding it downward until it locks into place.

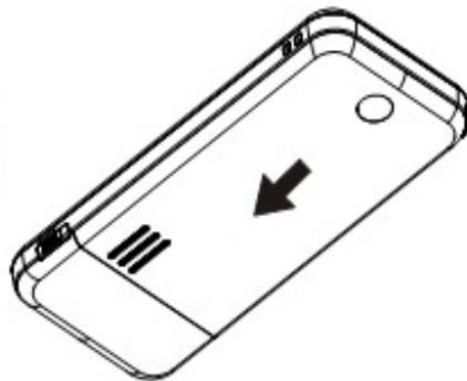

Charging the Battery

You must charge the battery for at least 4 hours before you use the phone for the first time. After this, the battery will normally take around 2 hours to charge.

1. Insert the connector of the charger into the micro-USB connector at the lower left side of the phone.
2. Plug the other end of the charger into a power outlet.
3. When the battery is fully charged, the battery icon will stop scrolling and then you can unplug the charger from the power outlet.
4. Disconnect the charger from the phone.

Battery Performance

1. Your phone is powered by a Lithium ion rechargeable battery.
2. Your new battery will achieve its maximum performance after two or three full charge-discharge cycles.
3. The battery can be charged and discharged hundreds of times until it wears out. When talk time and standby time are noticeably shorter than normal, it's time to replace the battery.
4. Do not leave your phone connected to the charger for over a day as overcharging can shorten the battery's service life
5. A fully charged battery will gradually discharge when the phone is not in use.
6. Use only batteries approved by Verzio and recharge your battery using only chargers approved by Verzio.

Inserting the Memory Card

To store multimedia files, you must insert a micro-SD card to your phone.

1. Remove the battery cover.
2. Push down the memory card holder and then lift it up.
3. Insert the memory card with the gold plate facing down.
4. Press down the memory card holder and push up until it is locked into place.
5. Insert the battery and replace the battery cover.
6. In Idle mode, press **[Menu]** → **File manager** to access files stored in your memory card.

Switching your Phone On and Off

Press and hold **[POWER]** to turn on or off your phone.

Idle Mode

Your phone is in Idle Mode and ready for use when the name of the service providers appear. The Idle Mode acts as your phone's home page.



Using the Stylus

Some functions, such as stroke input method, are designed to be used with a stylus. The pen stylus is located in the top right portion of the device.

Touch Screen

Your phone features a touch screen which provides a faster and more intuitive way to navigate through menus and lists.

To open an application or other element on the touch screen, you normally tap it with your finger or the stylus.

Slide lock

When both Auto keypad lock (refer to p. 46) and Slide lock (refer to p. 44) are set to **On**, an on-screen slide lock is activated when no keys are pressed after a certain period of time.

To unlock the touch screen and keypad, use you finger or stylus to drag the slide lock to the right.



Drag the slider to the right to unlock

Quick Launch Toolbar

The touch screen comes with a side toolbar which has shortcut icons whose applications can be plugged in to the Main Display for quicker access.

The toolbar has six plug-in icons:

- SIM-1 Operator name
- SIM-2 Operator name
- Profiles
- Date and time
- Wallpaper selector
- Analog clock
- Games

In Idle mode, use your finger or stylus to tap the arrow tab located at the lower left side of the touch screen then the quick launch toolbar will slide out.

Drag an icon out of the toolbar then drop it on the Main Display to plug in the quick launcher of the program.

To remove the quick launcher, simply drag it back to the toolbar.



Main Menu

The Main Menu displays a grid of icons which represents all of the currently installed features of your phone.



Dual SIM Mode

Your phone allows you to have one or both SIM cards active.

Setting the phone to **Flight mode** cuts off network connections and stops it from searching for available networks. At this mode, you can still use the other features of your phone such as playing games, listening to music, setting your calendar, or reading an e-book, while in areas where wireless devices are prohibited.

To access this function, select **[Menu] → Settings → Dual SIM settings**.

Phone Calls

This section explains how to make and receive phone calls, view your call history, and create shortcuts to make dialing numbers even quicker and easier.

Making a Voice Call

There are several ways to make a call. You can do one of the following:

- In Idle mode, enter the phone number, including the area code if required, and press **[SIM-1]** or **[SIM-2]** to dial.
- Select a contact saved in the Phonebook and press **[SIM-1]** or **[SIM-2]** to dial.
- Select a phone number in the Call history list and press **[SIM-1]** or **[SIM-2]** to dial.

Note

To adjust the audio level during a call, press **[▲]** or **[▼]**.

Making International Calls

International calls require a country code to be included in the phone number. The country code is separated from the rest of the number sequence by a plus sign (+).

To insert an international country code, press **[*]** repeatedly until the plus sign '+' appears.

Answering and Rejecting a Call

When you receive a call, the phone rings and/or vibrates and displays an incoming call notification for SIM-1 or SIM-2.

To answer a call, press **[ANSWER]** or select **<Options> → Answer**.

Select **<End>** to end the call.

Select **<Reject>** to reject an incoming call.

Calling a Contact from your Phonebook

You can make a call to a phone number stored in your phone, SIM-1, or SIM-2 memory.

1. In Idle mode, press **<Name>** to view all your contacts on the phone memory, SIM-1, and SIM-2 which are alphabetically arranged and combined into one list.
2. Scroll through the list or do a quick search until the contact you require is highlighted.
3. Select **<Options> → SIM-1 (or SIM-2) IP dial** to make the call.

Making a Call from Call History

Your phone keeps a list of the calls you recently missed, received, and dialed at SIM-1 and SIM-2.

1. In Idle mode, press **[Call key 1]** to open Call history.
2. Select SIM-1 (or SIM-2) call log to open the list of recent calls on the selected SIM.
3. Scroll through the list and select a call entry.
4. Press **<OK>** to see the call details.
5. Select **<Options> → Call SIM-1 (or SIM-2) voice call**.
6. Press **<OK>** to dial the entry.

Using Speed Dial

Once you have set up a speed dial for a phone number you can make a phone call by only pressing one key. You can set a

maximum of 8 frequently called phone numbers in the Speed Dial list.

1. In Idle mode, press **[Menu] → Call center → General call settings → Speed dial → Status** then activate Speed dial.
2. Scroll to **Set number** then press **<OK>**.
3. Scroll to a free number **[2-9]** in the speed dial list then press **<Options> → Edit**.
4. Select a contact in the Phonebook list then press **<OK>** to save.
5. In Idle mode, simply press and hold the number key assigned with a phone number in the speed dial list then select **SIM-1 (or SIM-2) voice call** to dial.

In-call Options

While a call is in progress, select **<Menu>** then select any of the following options:

Hold a single call	Put the active call on hold
End a single call	End the call
New call	Make a new call during an active call
Phonebook	Retrieve a contact stored in the Phone Book (SIM or phone memory)
Message center	Create a new text message or engage in chat messaging
Sound recorder	Record the phone conversation
Mute	Mute the microphone for the active call. The other party cannot hear anything you say, but you can still hear the other party.

Making Multiple Calls

Making a Second Call

You can put an existing call on hold to make another call using the same SIM.

1. During a call, select **<Options> → New call** to put the call on hold.
2. Select **<Options>** then enter the phone number and then select **<Options> → SIM-1 (or SIM-2) voice call** to make the second call.
3. Select **<Options> → <Swap>** to switch between the two calls.
4. To end the active call, select **<Options> → End single call**. The call that is on hold will then become active.
5. Press **[END]** to end the remaining call.

Call Waiting

When you are on a call, you will be notified that a new call is incoming on the same SIM.

To answer the second call, select **<Options> → Answer** then the first call will be put on hold.

To switch between two calls, select **<Options> → Swap** to put the active call on hold and then activate the other call on hold.

Conference Call

1. Make a call to the first participant in the normal way.
2. Select **<Menu> → New call** or **Phonebook** then enter the phone number of the next participant and then press **Call** using the same SIM to dial. The first call is automatically put on hold.

3. After the second participant answers the call, select **<Menu> → Conference**. This joins the first participant into the conference call.
4. Repeat steps 2 and 3 to add more participants.
5. Select **<End>** to end the conference call.

Blocking Unwanted Calls

Unwanted or annoying callers can be blocked with the help of the phone's Black List feature.

To activate this feature, select **[Menu] → Call Center → General call settings → Black list → Black list mode → <On>**.

Scroll down then select **Black list number** then enter the phone number that you want to be blocked then select **<Save>**.

When activated, the unwanted caller will not be able to reach your phone number every time he attempts to call you.

Messages

This section shows you how to create, send, receive, and manage different types of messages.

Text Messages (SMS)

Select **[Menu] → Messages → SMS** and then a list of message folders will be displayed:

Inbox	Contains received text messages
Outbox	Temporary storage space for messages being sent
Write message	Create a new text message
Templates	Contains predefined text strings that you can insert in your message
SMS Settings	Set up and manage your text messages at SIM-1 or SIM-2

Creating and Sending a Text Message

1. In Idle mode, press **<New SMS>** to open the text message field.
2. Type your text message.
3. Select **<Options> → SIM-1 (or SIM-2) selected → <OK>** to confirm the text message.
4. Select **Send Only** or **Save and Send** then enter the phone number of the recipient and then press **<OK>** to send the text message.

Entering Text

You can enter text, numbers, and symbols using various input methods.

- Press [#] to switch between numeric and text input methods as well as between upper case and lower case. .
- Press [*] to display the list of symbols.

You can enter text by using one of the following methods:

Smart ABC/abc	Enter the key sequence that represents the word that you want to write. Select the word from the list of suggested words that will be displayed.
Multitap ABC/abc	Press the numeric key repeatedly until the required letter is displayed.
Smart Pinyin	Press number key [2-9] containing the required Pinyin letters, and the phone will display suggested words according to the pronunciation rules of Mandarin.
Multitap Pinyin	Press the numeric key repeatedly until the required character is displayed.
Simplified Chinese stroke	The stroke input method in this phone classifies a Chinese character into 5 basic strokes: (horizontal, vertical, left falling stroke, right falling stroke and over-down) as well as a special stroke. When the stroke you

	need does not correspond to the 5 basic strokes, replace it with the special stroke
Numeric	Press the number you want to enter from the keypad

Multimedia Messages (MMS)

Select **[Menu] → Messages → MMS** and then a list of message folders will be displayed:

Write message	Create a new MMS
Inbox	Contains received multimedia messages
Outbox	Temporary storage space for messages being sent
Drafts	Stores unfinished or unsent messages
Templates	Contains predefined text strings that you can insert in your message
MMS Settings	Set up and manage your multimedia messages at SIM-1 or SIM-2

Creating and Sending MMS

Before you can begin sending and receiving multimedia messages, you must first configure your phone to the MMS settings of your service provider for SIM-1 or SIM-2.

1. In Idle mode, select **[Menu] → Messages → MMS → Write message**.

2. Enter one or more phone numbers of the recipient(s) field and then scroll down to the text field.
3. Press **<Edit>** then type your text message.
4. Press **<Options> → Add picture (or audio, or video, or attachment)** then select from the phone memory or memory card the media object to insert into the message.
5. Press **<Options> → Done → <Done>** to confirm that the message is ready to be sent.
6. Select **Send only** or **Save and Send** and then press **<OK>**.
7. Select **SIM-1** or **SIM-2** and then press **<OK>** to send the MMS message.

Reading and Replying to a Message

SMS and MMS messages you receive are stored in the Inbox. The most recently received messages are displayed at the top. Each message is marked with SIM-1 or SIM-2 to let you know which SIM received the message.

1. To open a text message, select **[Menu] → Messages → SMS → Inbox → SIM-1 Inbox** or **SIM-2 Inbox**.
To open a MMS message, select **[Menu] → Messages → MMS → Inbox**.
2. Select the message that you want to open.
3. After reading the message, select **<Options> → Reply** then create your new message.
4. To send your reply message, select **<Options> → SIM-1 selected** (or **SIM-2 selected**).

SMS Settings

Select **[Menu] → Messages → SMS → SMS Settings → SIM-1** (or **SIM-2**) **message settings**

Profile settings	View the message service center that has been defined, or add a new service center
Common settings	
Delivery report	Receive delivery reports about your messages
Reply path	Allow the recipient of your message to send you a reply using your message center
Memory status	View the free and used memory capacity of SIM and phone
Preferred storage	Define whether to use the phone memory or the SIM to store received messages

MMS Settings

Select **[Menu]** → **Messages** → **MMS** → **MMS Settings**

Create

Creation mode	Restrict or allow various types of multimedia to be added to messages
Picture resizing	Select the size of images in multimedia messages
Auto signature	Select On to automatically add a signature when you write your MMS message

Send

Validity period	Set a maximum amount of time allowed for a message to reach a recipient
Delivery report	Receive delivery reports about your MMS

	messages
Read report	Set to On to see the status of whether or not your MMS message was received
Priority	Select whether a multimedia message has a low, normal, or high priority
Slide timing	Define the default time between slides in MMS messages
<hr/>	
Retrieval settings	
Home network	Allow, block, or delay receiving of MMS messages when you are in your home network
Roaming	Allow, block, or delay receiving of MMS messages when you are roaming in another network
Read report	Set to On to see the status of whether or not your MMS message was received
Delivery report	Receive delivery reports about your MMS messages
<hr/>	
Filter	
Anonymous	Allow or reject MMS messages from anonymous senders
Advertisement	Allow or reject receiving advertisements via MMS
<hr/>	
Server profile	Select or configure the MMS profile of your service provider
<hr/>	
Memory status	View the free and used memory capacity of SIM and phone
<hr/>	

Chat Messaging

Your phone comes with an alternative SMS application that lets you send and receive SMS messages via a chat-style interface.

Contacts

You can store names, phone numbers as well as other useful information in the phone and SIM memory.

Adding a New Contact

From Idle Mode

1. Type the phone number of the new contact you wish to add.
2. Select **Add to Phonebook** → **Save to SIM-1** (or **SIM-2** or **phone**).
3. Select **<Edit>** then enter the contact details.
4. Select **<Done>** → **<Yes>** to save the new contact.

From Call History

1. Open **Call history** then select the phone number from the list of recent calls at SIM-1 or SIM-2.
2. Select **<OK>** to view the call information.
3. Select **<OK>** → **Save to Phonebook** → **To SIM-1** (or **To SIM-2** or **To phone**).
4. Select **<Edit>** then enter the contact details.
5. Select **<Done>** → **<Yes>** to save the new contact.

From SMS or MMS

1. Select a message stored in the Inbox (SIM-1 or SIM-2)
2. Select **<Options>** → **Use number** → **Save to Phonebook** → **To SIM-1** (or **To SIM-2** or **To phone**).
3. Select **<Edit>** then enter the contact details.
4. Select **<Done>** → **<Yes>** to save the new contact.

Searching for a Contact

1. In Idle mode, press **<Names>**.
2. On the search bar, enter up to the first five letters of the name that you want to locate.
3. The phone will shortlist the closest name matches which will be narrowed down as you type more letters.
4. Select the contact name from the search list.

Contact Options

When viewing a contact, select **<Options>** and perform any of the following:

- Call the contact via SIM-1 or SIM-2
- Send a SMS/MMS message to the contact
- View the contact's details
- Edit the contact information
- Delete the contact from a phonebook
- Copy/Move the contact to another phonebook memory
- Duplicate the contact
- Send a vCard to the contact

Copying a Contact

1. In Idle mode, press **<Names>**.
2. Select the contact name to copy.
3. Press **<Options>** → **Copy** then select **Copy from phone to SIM** (or **Copy from SIM to phone** or **Copy from SIM to SIM**).
4. Select **<OK>** → **<Yes>** to create a copy of the contact in the selected phonebook.

Copying All Contacts

1. In Idle mode, select **[Menu] → Phonebook → Copy all** and then select **From SIM to phone** (or **From phone to SIM** or **From SIM to SIM**)
2. Select **<OK> → <Yes>** to create a copy of all contacts in the selected phonebook.

Personalizing your Contacts

1. You can add a personal ring tone, a thumbnail image, or a video to a contact name.
2. To assign a media file to a contact, select **[Menu] → Phonebook → Caller picture** (or **Caller ring tone** or **Caller video**).
3. Select the media file then select from the following options:
 - To new contact
 - To selected contact
 - To caller group

Sending your Business Card

You can send your contact information in the form of a business card to a compatible device that supports the vCard standard.

To create your business card, select **[Menu] → Settings → My vCard → Edit my vCard**.

Enter your personal information then select **<Done> → <Yes>** to save your vCard.

To send your business card, select **[Menu] → Settings → My vCard → Send my vCard → Send by SMS** or **Send by MMS** or **Send by Bluetooth**.

Creating a Caller Group

You can create caller groups in your phonebook which allows you to send messages to many recipients at the same time.

1. In Idle mode, press **[Menu] → Phonebook → Caller group** to open the Groups list.
2. Select a Caller group and you may choose to rename it as well as assign a ring tone, a picture, or a video to help you easily identify the caller during an incoming call.
3. Select **Caller group members → Add** to display the list of your contacts.
4. Select the contact name then select **<Add> → Yes** to add the contact to the group.
5. Repeat this action when adding more members to the group.

Note

Only contacts stored in the phone memory can be assigned as members to a caller group.

Profiles

Profiles are used to configure how your phone notifies you of all events such as incoming calls, an upcoming appointment, or new messages.

Your phone is supplied with a set of predefined profiles, which you can edit for SIM-1 and SIM-2 so that they work best for you.

These profiles are:

- General
- Meeting
- Outdoor
- Indoor
- Headset
- Bluetooth

The following is a list of settings that you can change in each profile:

Tone setup	Select the type of alert or notification and then select a ring tone from the list of ring tones stored on the phone.
Volume	Adjust the volume level of the ring tone, alert tone, and the keypad tone.
Alert type	Select how the phone notifies you when a call is incoming and a new message has been received.
Ring type	Select the timing of the ring tone when a call is incoming
Extra tone	Assign alert tones to other events such as warnings, errors, network connection, and data connection

Answer mode

Set the phone so that an incoming call is answered by pressing any key

Settings

You can customize your phone by changing its settings in order to suit the way you use it.

Dual SIM Settings

(Please see **Dual SIM Mode** on p. 24)

Pen Calibration

Tap the center of the cross with the stylus as the cross moves around the screen. This ensures that when you tap the screen with your stylus, the tapped item is activated.

Phone Setting

Time and date

Select **[Menu] → Settings → Phone setting → Time and date** to change the time and date, the home city, and the format in which time and date information is displayed.

Schedule power on/off

Select **[Menu] → Settings → Phone setting → Schedule power on/off** to set the time for the phone to be switched on and off automatically.

Language

Select **[Menu] → Settings → Phone setting → Language** to change the language used by your phone in all display texts as well as to input text.

Preferred input method

Select **[Menu] → Settings → Phone setting → Preferred input method** to select your desired text input method, please see **Entering text** on p. 32.

Display idle mode menu

Select **[Menu] → Settings → Phone setting → Display idle mode menu** to personalize your wallpaper, screen saver and power on/off display.

Phone style settings

Select **[Menu] → Settings → Phone setting → Phone style settings → Slide lock** to activate an on-screen slide lock which locks the touch screen and keypad when no keys have been pressed for a set period of time.

Select **[Menu] → Settings → Phone setting → Phone style settings → Style settings** to use animation effects when navigating the menus of the phone.

Greeting text

Select **[Menu] → Settings → Phone setting → Greeting text** to show a welcome greeting when your phone is turned on.

Dedicated key

Select **[Menu] → Settings → Phone setting → Dedicated key** to assign the four-way navigation keys as shortcut keys to directly access frequently used functions.

Auto update of date and time

Select **[Menu] → Settings → Phone setting → Auto update of date and time** to set the phone to automatically update the time and date according to the current time zone.

Handwriting

Select **[Menu] → Settings → Phone setting → Handwriting** to set the speed in converting your handwriting to text shortly after you lift the stylus from the screen. It also sets the color of your stroked lines on the screen when using the stylus.

LCD backlight

Select **[Menu]** → **Settings** → **Phone setting** → **Misc. settings** to adjust the brightness and duration of the backlight.

Network Setting

Each time the power is turned on, your phone selects a network automatically.

If your phone is not connected to the network, you can perform the following immediately to establish the preferred network connection.

SIM selection

Select **[Menu]** → **Settings** → **Network setting** → **SIM-1 (or SIM-2) network setting**.

Network selection

Select **Automatic** if you want the phone to automatically search for, and select, an available network to use. Select **Manual** to display a list of available networks from which you can select manually.

Preferred networks

Add then select a network and assign it as the preferred network. Each time the power is turned on, your phone always tries to connect to the preferred network.

Security Setting

Locking the keypad

To lock the keypad, press **[Menu]** followed by **[#]**.

To unlock the keypad, press **[LSK]** followed by **[#]**.

SIM-1 or SIM-2 security settings

Select **[Menu] → Settings → Security setting → SIM-1 (or SIM-2) security settings.**

Lock SIM-1(or SIM-2)	Set the phone to ask for your PIN code every time the phone is switched on
Fixed dial	Restrict outgoing calls to certain phone numbers only
Barred dial	Restrict incoming calls to and outgoing calls from your phone. A barring password is required
Change password	Change your PIN1 and PIN2 codes
Handset trace	A security feature that helps recover your phone in case of loss or theft. Once a different SIM card is inserted on SIM-1, the phone will automatically send a text message to your assigned mobile number, allowing you to get the mobile number of the person holding your phone.

Phone lock

This is a code used to lock the phone and protect it from unauthorized use. The preset password is 1234.

To activate the phone lock, select **[Menu] → Settings → Security setting → Phone lock** and then enter your password.

Auto keypad lock

Select **[Menu] → Settings → Security setting → Auto keypad lock** to select the time after which your phone will automatically lock itself if no keys have been pressed.

Change password

To change your password, select **[Menu] → Settings → Security setting → Change password → Phone password**.

Enter existing password then enter your new password twice and then press **<OK>** to activate your new password.

Restore Setting

To reset some of the menu settings to their original values, select **[Menu] → Settings → Restore setting**. Enter the phone lock password. Using this function will not delete the data stored in your phone.

Sound Effect

Select **[Menu] → Settings → Sound effect** to enhance the sound of your ring tones.

Themes

Select **[Menu] → Settings → Themes** to personalize your wallpaper and color scheme.

Organizer

This section shows the features of your phone that can help you stay organized.

Calendar

Use the Calendar to organize your business and personal schedules. You can keep track of your meetings and appointments, birthdays, anniversaries, and other events and set an alarm to remind you of upcoming events.

To create a calendar entry, select **[Menu] → Organizer → Calendar** then select a date and then select the task type. Enter information in the fields displayed.

You can view the Calendar by day, week, or month.

To Do

Your phone allows you to keep track of your tasks that need to be done. Select **[Menu] → Organizer → To do → Add** then select the task type and then enter information in the fields displayed.

Alarm

You can set the phone to alarm at a desired time. You can set the phone to up to five different alarm times.

1. Press **[Menu] → Organizer → Alarm** to open the list of alarm times.
2. Select an alarm time then press **<OK>** to edit the settings.
3. Set the alarm to **On**.
4. Scroll down to the next field then enter the alarm time.
5. Scroll down to **Repeat** then select the days of the week for the alarm to sound off.

6. Scroll down to **Alert tone** to select the type of ring tone for the alarm. You can select an audio file as your alarm tone.
7. Scroll down to **Snooze** to select how long for the alarm to stop before going off again.

After setting the alarm, an alarm icon will be displayed in Idle mode.

World Clock

Your phone has a world clock that lets you know the exact time in other major cities around the world.

Press **[Menu] → Organizer → World clock** to view the world map.

Select a city by pressing [**◀**] and [**▶**] then the actual time in that location will be displayed.

Extra

This section shows you the other various applications that your phone has.

Calculator

The calculator function performs the 4 arithmetic calculations for up to 12 digits.

Press **[Menu] → Extra → Calculator** to open the on-screen calculator.

Use the numeric keypad to enter the numbers. Press **[#]** key to insert a decimal point.

Use the four-way navigation keys to perform basic mathematical operations.

A more convenient way to use the calculator is to tap the on-screen keys using the stylus.

Unit Converter

Use the unit converter to convert length and weight from one system of measurement to the other (English system to metric system and vice versa).

1. To perform a conversion, select **[Menu] → Extra → Unit converter** then select **Weight** or **Length**.
2. Press **[◀]** and **[▶]** to select the pair of base unit and new unit.
3. Scroll to the first Unit field and then enter the numerical value that you want to convert then press **<OK>**.
4. The converted value appears on the second Unit field.

Currency Converter

You can use your phone as a calculator to convert one currency to another.

Select **[Menu]** → **Extra** → **Unit converter** to open the Rate input screen.

Enter the exchange rate, press **[#]** for a decimal point then press **<OK>**.

Press **[◀]** and **[▶]** to select the base currency.

Scroll down to the Local field then enter the amount to be converted then press **<OK>**.

The converted value will be displayed in the Foreign field.

Health

Body Mass Index (BMI)

BMI is a measurement of body fat based on height and weight that applies to both men and women between the ages of 18 and 65 years.

BMI can be used to indicate if you are overweight, obese, underweight or normal. A healthy BMI score is between 20 and 25. A score below 20 indicates that you may be underweight; a value above 25 indicates that you may be overweight.

Select **[Menu]** → **Extra** → **Health** → **BMI** then select your sex and enter your height and weight. Your BMI will then be displayed.

Menstrual Cycle

Knowing the menstrual cycle and having regular menstrual cycles are important information for couples trying to conceive.

This menstrual cycle regularity tool will calculate whether a woman has regular cycles or not based on the dates of her last menstrual periods.

Select **[Menu]** → **Extra** → **Health** → **Menstrual cycle** then enter the Last Menstruation Date and Average period, then a weekly calendar will be displayed with ovulation time and the common time marked with a different color.

Stopwatch

Use the stopwatch to measure time, intermediate times, or take lap times.

Select **[Menu]** → **Extra** → **Stopwatch** to open the stopwatch.

Select the type of stopwatch that you want to use.

Typical stopwatch

Split timing

- Press **<Start>** to start the timer running.
- Press **<Split>** to take intermediate times.
- Every time **<Split>** is pressed, the new time is added to the previous time while the stopwatch continues running to record the total elapsed time.
- Press **<Stop>** to pause the time observation.
- Press **<Done>** → **<Yes>** to save the measured split time(s).

Lap timing

- Press **<Start>** to start the timer running.
- Every time **<Lap>** is pressed, the timer stops, leaving the elapsed time of the lap displayed while the stopwatch restarts to zero.
- Press **<Stop>** to pause the time observation.
- Press **<Done>** → **<Yes>** to save the measured lap time(s).

Multi stopwatch

- Use the four way navigation keys to start and stop four individual timers.

-
- Press the Left Soft key to stop and resume a timer.
 - Press **[OK]** to stop and resume the main timer.
 - Press and hold **[OK]** to reset all timers.
-

E-book

You can use your phone to read electronic books stored in the phone memory or memory card. Your phone supports e-books in plain text (TXT) format.

Use the memory card as storage for e-books as such files are generally large in size. Select **[Menu] → Extra → E-book → Options → Global settings** then select **Memory card** under **Select Storage** field.

Reading an e-book

Select **[Menu] → Extra → E-book** to open the Bookshelf which displays the names of your e-books.

Select a title then select **Open E-book** to display the text of the e-book.

To bookmark a page, select **<Options> → Add bookmark** then assign a bookmark number. You can add as many bookmarks as you like.

Select **<Options> → Settings**, to change the font style and size, select to scroll by page or by line, activate auto scrolling and full screen view, and change the character encoding scheme.

Bluetooth

Your phone can wirelessly connect to a Bluetooth enabled device in order to exchange data and use its hands-free functions.

Activating Bluetooth

Before you can use Bluetooth, you must set up your phone to enable a Bluetooth connection to be made.

Press **[Menu] → Extra → Bluetooth → Power on Bluetooth** to turn on the Bluetooth function.

If you want other Bluetooth devices to be able to find your phone when doing a device search, scroll down and select **Settings → Visibility → <On>** to activate.

Note

Your phone is compliant with Bluetooth Specification 2.0 and supports File Transfer, Handsfree, Headset (A2DP), Object Push, and Serial Port.

Pairing with other devices

Pairing is a way of setting up a secure and trusted relationship with another device. When you pair your phone with another device, you agree a shared passcode for both devices to use. Your phone stores all the pairings that you have set up, so that paired devices will be recognized in the future.

1. From the Bluetooth menu screen, turn on the Bluetooth connection.
2. Scroll down and select **My Device → Search bluetooth device**.
3. Your phone will search for all Bluetooth enabled devices within the 10 meter range, and display a list of devices found.
4. Select the device you want to pair with then press **<Bond>**.
5. Enter a passcode of 1 to 16 characters then press **<OK>** to start pairing with the other device.

6. Enter the same passcode on the other device to establish the pairing.
7. If necessary, edit the name of the other device for easy recognition.

Sending data via Bluetooth connection

Once you have set up your phone to enable Bluetooth connections, you are ready to send data such as photos, video clips, sound clips, documents and more.

1. Locate the data you want to send. Select **[Menu] → My files → Phone or Memory card → <Options> → Open** to display the folders list.
2. Select a folder and then the file you want to send then select **Forward → To Bluetooth**. Skip to step 4.
3. To send your business card, select **[Menu] → Phonebook → Settings → My vCard Send My vCard → Send by Bluetooth → <OK>**.
4. Select the paired device you want to send the file.
5. Press **<OK>** to send the file.

Receiving data via Bluetooth connection

When your phone receives data via a Bluetooth connection, a tone sounds, and you are prompted whether you want to accept or reject the incoming data.

When prompted to receive an incoming data, press **<Yes>** to accept the file transfer.

The data will then be stored in your memory card.

Select **<Browse> → <Options> → View** to open the file.

Connecting to the PC

You can connect your phone to your PC to copy files to and from your phone or to use it as a webcam.

Transferring data

1. Connect your phone to the PC with the USB cable.
2. In your phone, select **Mass storage**.
3. The PC will detect your phone as an external hard drive where you can transfer images, songs, and videos.

Webcam

1. Connect your phone to the PC with the USB cable.
2. In your phone, select **Webcam**.
3. Set up and use your phone in the same way as you do with a webcam.

Media

You can take photos or record video clips with the built-in digital camera. Your phone also includes a audio player for listening to music tracks and sound recordings that you have transferred to the Audio folder of the phone or the My Music folder of the memory card.

Camera

The camera produces pictures in JPG format and can be zoomed up to four times.

1. In Idle mode, press [▼] to activate the Camera.
2. Hold the phone upright, using the screen as the viewfinder for your picture.
3. Point the camera lens at the subject and adjust the camera settings.
4. Press [OK] to take the photo. The shutter sounds and the picture is then displayed on the screen.
5. Press <Save> to save the picture and then the phone automatically returns to camera standby mode.

Sending a Picture via MMS

1. Once you have taken a picture, press [OK] then a new MMS screen will be displayed. Your picture will be automatically resized and inserted to the MMS message.
2. You can then edit and send the MMS message in the normal way.

Camera settings

Key	Function
[◀] / [▶]	Exposure Value (EV) with range from -4 ~ +4
[▲] / [▼]	Zoom in or out
[1]	Adjust Effect settings Normal, Sepia, Sepia green, Sepia blue, Color invert
[2]	Adjust White Balance Auto, Daylight, Tungsten, Fluorescent, Cloud, Incandescent
[4]	Adjust Delay timer {Off, 5 sec, 10 sec, 15 sec}
[5]	Continuous shot {Off, 1 shot, 3 shots, 5 shots}
[6]	Scene mode {Auto, Night}
[7]	Image quality {Low, Normal, High}
[8]	Image size 80x60, 160x120, 176x220, 320x240, 640x480, 1280x960
[#]	Hide or unhide display icons

Image viewer

Pictures that you take will be saved to your phone or memory card under the Photos folder.

1. To open Image viewer, select **[Menu] → Media → Image viewer → <Options> → Storage → Phone or Memory card**.
2. Scroll through the thumbnails and select the picture that you want to view.
3. Press **[OK]** to view the picture.

Video recorder

The camera stores video clips in AVI format.

1. In Idle mode, select **[Menu] → Multimedia → Video recorder**.
2. Hold the phone upright, use the screen as the viewfinder for your video.
3. Point your phone at the subject and adjust the camera settings.
4. Press **[OK]** to start recording the scene in your phone's display.
5. While recording the video, you can press **[◀] / [▶]** to adjust the brightness or press **[▲] / [▼]** to zoom in and out.
6. Press **<OK>** to pause, press **<Stop>** to end the recording then press **<Yes>** to save the video. Your phone will then automatically return to video recorder standby mode.

Video player

Video clips that you record are saved in the phone or memory card under the Videos folder.

1. To open Image viewer, select **[Menu] → Media → Video player → <Options> → Storage → Phone or Memory card**.
2. Scroll through the thumbnails and select the video clip that you want to view.

3. Press **[OK]** to open the video clip then press **[OK]** to start or pause video playback.

Audio player

With the audio player you can play music tracks and other audio files stored in the phone memory or memory card. The audio player supports MP3, WAV, MIDI, AAC, AAC+, AMR audio formats.

In Idle mode, press **[▲]** to launch the Audio player.

Select **<List>** to open the common playlist.

Select **Refresh list** to add new music tracks in the playlist.

Select a music track then press **<OK>** then the track will start playing.

Playback controls

Use the following keys to control playback.

Key	Function
[OK]	Play / Pause the current track
[Call key 1]	Stop playback
[▶]	Skip to the next track
[◀]	Skip to the previous track
[▲]	Increase the volume
[▼]	Decrease the volume

Sound recorder

Your phone supports the recording of speech, sound, and active voice calls.

Sound recorder settings

Select **[Menu] → Media → Sound recorder → <Options> → Settings** to change the available settings.

Preferred storage	Define whether to use the phone memory or memory card in storing sound clips
File format	Select AMR, WAV, or AWB as audio format when recording a sound clip
Audio quality	Select level of audio quality – High or Low

Recording sound

1. Select **[Menu] → Media → Sound recorder → <Options> → Record**.
2. Press **<OK>** to start recording.
3. Hold the phone's microphone near your mouth or another sound source.
4. Press **[LSK]** to pause or resume recording. To stop recording, press **[RSK]** to stop recording then the phone will assign a file name for the recorded sound clip.
5. Select **<Options> → Save** to save the recording. The new recording will be saved in the preferred storage location.

Recording an active call

1. During an active call, select **<Options> → Sound recorder**, recording will then start.
2. Press **[LSK]** to pause or resume recording. To stop recording, press **[RSK]** then the phone will assign a file name for the recorded sound clip.
3. Select **<Options> → Save** to save the recording. The new recording will be saved in the preferred storage location.

Listening to a sound clip

1. Select **[Menu] → Media → Sound recorder** then the list of sound clips will be displayed.
2. Select an AMR file then select **<Options> → Play** to listen to the sound clip.

Services

This section explains how to configure your phone's MMS and GPRS connection settings and then how to access the Internet and other operator services.

SIM Toolkit [STK]

In addition to the features installed on your phone and described in this guide, you may also have certain operator features and services contained on the SIM card. The title and content will vary according to what SIM services that your operator provides.

Any features provided by your SIM card can be accessed from the SIM toolkit, which can be accessed by pressing **[Menu] → Services → STK1** or **STK2**.

Using Browser Profiles

Your phone contains a WAP browser used for surfing on the Mobile Internet, where you can get a lot of useful information.

Before you can start web browsing, you need to set up data connections which will allow your phone to connect to the Internet via GPRS.

GPRS settings of selected service providers have already been preset on your phone.

1. In Idle mode, press **[Menu] → Services → WAP → Settings** then select SIM-1 or SIM-2 as the priority SIM.
2. Scroll down and select **Edit Profile** then select the priority SIM assigned in Step 1.
3. Select the Browser profile of the priority SIM then press **<OK>** to activate the profile.

Connecting to the Internet

In Idle mode, press **[Menu] → Services → WAP Settings**.

- Select **Homepage** to access the website of your service provider.
- Select **Bookmarks** to open a list of saved bookmarks. Select a link and then select **<Go>** to start connecting.
- Select **Recent pages** to view the list of websites you recently visited.
- Select **Offline pages** to view the content of the web pages you have saved in the memory card.
- Select **Input address** then type the address of the website and then press **<Done>** to start connecting.

Using Data Accounts

One of the parameters in configuring a browser profile is the data account which contains the Access Point Name (APN) where your phone connects to the Internet via a data call (GSM) or packet data connection (GPRS).

The MMS and GPRS APNs of selected service providers have already been preset on the phone.

Select **[Menu] → Services → Data account** to view the service providers saved in the phone. You can also select an empty profile to create a new data account.

Menu Map

1 - My Files

(Insert memory card to view menu options).

2 – Phonebook

- 1) Quick search
- 2) Find contact
- 3) New contact
- 4) Copy all
- 5) Delete
- 6) Caller group
- 7) Other number
- 8) Settings
- 9) Caller picture
- 10) Caller ring tone
- 11) Caller video

3 – Call Center

- 1) Call history
 - 1) SIM-1 call log
 - 2) SIM-2 call log
- 2) General call settings
 - 1) SIM-1 call settings
 - 1] Caller ID
 - 2] Call waiting
 - 3] Cal divert
 - 4] Call barring
 - 5] Line switching
 - 6] Closed user group
 - 2) SIM-2 call settings
(Same options as SIM-1)

3) Black list

- 4) Auto redial
- 5) Speed dial
- 6) Vibrate when outgoing call is connected

4 – Fun

- 1) Games
 - 1] Mahjong

5 – Messages

- 1) SMS
- 2) MMS
- 3) Write message
- 4) Templates
- 5) SMS settings

6 – Profiles

- 1) General
- 2) Meeting
- 3) Outdoor
- 4) Indoor
- 5) Headset
- 6) Bluetooth

7 – Media

- 1) Camera
- 2) Image viewer
- 3) Video recorder
- 4) Video player
- 5) Audio player
- 6) Sound recorder

8 – Organizer

- 1) Calendar
- 2) To do
- 3) Alarm
- 4) World clock

9 – Settings

(Please see the next table).

10 – Services

- 1) SIM-1 STK
- 2) SIM-2 STK
- 3) WAP
- 4) Data account

11 – Extra

- 1) Calculator
- 2) Unit converter
- 3) Currency converter
- 4) Health
- 5) Stopwatch
- 6] E-book
- 7) Bluetooth

12 – Shortcuts

(View list of functions that can be assigned to a shortcut key).

Settings Menu

- 1 – Dual SIM settings
 - Both SIMs online
 - SIM-1 online
 - SIM-2 online
 - Flight mode
- 2 – Pen calibration
- 3 – Phone setting
 - 1) Time & date
 - 2) Schedule power on/off
 - 3) Language
 - 4) Preferred input method
 - 5) Display idle mode menu
 - 1] Wallpaper
 - 2] Screen saver
 - 3] Power on display
 - 4] Power off display
 - 5] Show date and time
 - 6] Display owner number
 - 7] Display operator name
 - 6) Greeting text
 - 7) Dedicated key
 - 8) Auto update of date and time
 - 9) Handwriting
 - 10) LCD settings
- 4 – Network setting
 - 1) SIM-1 network setting
 - 2) SIM-2 network setting
- 5 – Security setting
 - 1) SIM-1 security settings
 - 1] Lock SIM-1
 - 2] Fixed dial
 - 3] Barred dial
 - 4] Change password
 - 5] Handset Trace
 - 2) SIM-2 security settings
(The same options as SIM-1)
 - 3) Phone lock
 - 4) Auto keypad lock
 - 5) Change password
- 6 – Restore setting
- 7 – Sound effect
- 8 - Themes

Technical Specifications

Model Name	Verzio Skii
SIM Cards Supported	Dual Active SIM, Dual Standby
Frequency Band	GSM 900/1800
Data Connection	GPRS
Internal Memory	2GB
Display	2.2" Multi-Touch LCD, 262K 176 x 220
Camera	1.3 MP
Image Capture	JPG
Image Format	JPG/GIF/BMP
Ring Tone Playback	MP3/WAV/MIDI/AMR/AAC/AAC+
Audio Player	MP3/WAV/MIDI/AMR/AAC/AAC+
Sound Recorder	AMR, Supports voice, sound, and call recording
Video Recorder	AVI
Video Player	AVI, 3GP, MP4
Connectivity	Bluetooth 2.0 with A2DP WAP 2.0 Browser / USB 2.0
Battery Capacity	600 mAH Li Ion
Battery Life	Standby time: Up to 240h Talk time: Up to 3h
Dimension	109 x 48.6 x 10.4 mm
Weight	84.3 g

Limited Warranty

Verzioworld Pte. Ltd. ("VERZIO") warrants, subject to the exclusions and limitations set forth below, that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

1. The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product or FIFTEEN (15) months from the date of its manufacture as determined by the date code in the Product.
2. The limited warranty extends to the original purchaser of the Product ("Consumer") and is not assignable or transferable to any subsequent purchaser or user.
3. During the limited warranty period, VERZIO will repair, or replace, at VERZIO's sole discretion, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of malfunction or failure of the Product during normal usage. No charge will be made to the Consumer for any such parts. VERZIO will also pay for the labor charges incurred by VERZIO in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. This limited warranty does not apply to any damage or failure to operate caused by use of the product other than in accordance with the instructions contained in the User Manual, or for periodic maintenance or repair due to normal wear and tear. VERZIO's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for

usage. VERZIO shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

4. Upon request from VERZIO, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
5. The Consumer shall bear the cost of taking or shipping the Product to the place of purchase or the Customer Service Department of VERZIO. If the Product was taken to the place of purchase, the Consumer shall bear the cost of retrieving the Product. If shipped to VERZIO, VERZIO shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty and provided that repairs were required to be performed under this limited warranty.
6. The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subject to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of VERZIO, including damage caused by shipping.
 - b) Physical damage to the surface of the Product, including scratches or cracks in or to the outside casing or LCD, or damages caused by dropping the Product.
 - c) The Product has been damaged from external causes such as liquid, water, collision with an object, or from fire, flooding, sand, dirt, windstorm, lightening, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft,

blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, or damage caused by the connection to other products not recommended for interconnection by VERZIO.

- d) The Product has been altered or repaired by anyone other than an approved VERZIO service center or if it has been used with unapproved accessories or other ancillary items.
 - e) For adaptations or adjustments made to the Product to comply with local standards in any country other than one for which the Product was designed and manufactured.
 - f) Loss or integrity of any user data stored in the Product or any storage device used in conjunction with the Product at any time.
 - g) The Customer Service Department at VERZIO was not advised by the Consumer in writing of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - h) The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - i) The defect or failure to operate was caused by defective function of the cellular system or by inadequate signal reception.
7. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a) The Consumer shall return the Product to the place of purchase for repair or replacement processing. Back up all data before returning the Product for repair. If the Consumer has sensitive information stored on the

Product, the Consumer must copy it to another device and delete it from the Product before repair.

- b) If "a" is not convenient because of distance (more than 100 km) or for other good cause, the Consumer may contact the Customer Service Department at VERZIO for further instructions.
- c) The Consumer shall ship the Product prepaid and insured. Expenses related to removing the Product from an installation are not covered under this limited warranty.
- d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
- e) VERZIO will repair or authorize the repair of the Product under the limited warranty within 30 days after receipt of the Product by VERZIO or a VERZIO authorized service center. If VERZIO cannot perform repair covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, VERZIO at its sole discretion, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage.
- f) If the Product is returned to the Customer Service Department at VERZIO during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned to the

Customer Service Department at VERZIO after the expiration of the limited warranty period, VERZIO's normal service policies shall apply and the Consumer will be responsible for all shipping charges.

- g) The Product consists of newly assembled equipment that may contain used components that have been reprocessed to allow machine compliance with Product performance and reliability specifications.
8. VERZIO neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
 9. This is the entire warranty between VERZIO and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, and all communications relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
 10. This limited warranty allocates the risk of failure of the Product between the Consumer and VERZIO. The allocation is recognized by the Consumer and is reflected in the purchase price of the Product.
 11. Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following delivery of the Product.